



ZipBeat-6000 Digital Metronome OPERATING GUIDE

SWEEP LED
DISPLAY


POWER ON/OFF;
DISPLAY SELECTOR
SWITCH

TEMPO SELECTOR,
IN BEATS PER
MINUTE OR LARGO
TO PRESTO

EARPHONE
JACK

MULTI-FUNCTION
SWITCH: ACCENTED
DOWNBEAT, 2-6 BEAT
INTERVALS & ADJUST-
ABLE TONE OUT IN 6
FREQUENCIES

STAND FOR EASY VIEWING

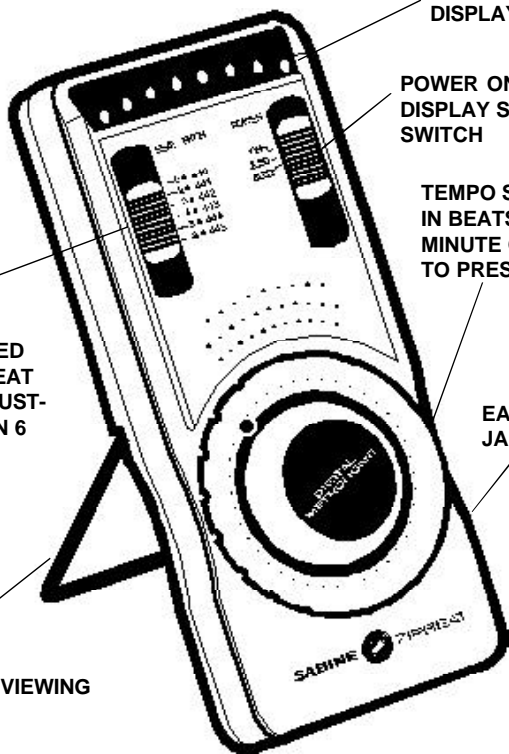

Sabine's new **ZipBeat-6000 Digital Metronome** offers you many valuable features previously available only in far more expensive metronomes:

- **Loud, clear tone**
- **Accented downbeat from 2-6 beats per measure**
- **Speed adjusts from 40 to 208 beats per minute (or Largo to Presto)**
- **Sweep LED gives you visual cue; switch from 2 alternating LEDs to 8 sweeping LEDs**
- **6-setting tone generator for reference pitch -- from A=440 - A=445 Hz**
- **Stand for easy viewing**
- **Free 9-volt battery included**
- **Free earphone included**
- **Two-year warranty**

INSTRUCTIONS

1. **Adjust the dial** to the desired tempo. Choose from 40-208 beats per minute, from Largo to Presto.
2. You can create an **accented downbeat** for indicating the beginning of a measure or practicing figures like triplets. Choose from 2 to 6 beats per measure, using the switch at the upper left of the metronome.
3. **Turn on the metronome** using the POWER switch at the upper right. Select either the "**2 LED**" setting to see two alternating LEDs that indicate the beat, or the "**8 LED**" setting to see eight LEDs that sweep back and forth.
4. If you want to check your tuning using the built-in **tone generator**, turn the dial to the red "A4" setting. Use the switch at the upper left to adjust the pitch from A=440 to A=445 Hz.
5. For **personal listening**, use the

earphone included with your metronome. Plug it into the jack on the side of the metronome; this will reduce the metronome speaker volume.

6. To **change the battery**, lift up the stand on the back of the metronome and open the battery compartment. Replace with another 9 volt battery.

SPECIFICATIONS

TEMPO:

Range: 40-208 beats per minute

Indication: Audible speaker beat with light

PITCH INDICATION:

Frequency: Adjustable, A=440-445 Hz

POWER SOURCE:

DC 9V battery

DIMENSIONS:

2.5 x 5.82 x 1.25 inches

6 oz., with battery

ACCESSORIES:

Earphone (included)

LIMITED TWO-YEAR WARRANTY

If your metronome fails because of a manufacturing defect within two years from the date of original purchase, return it to your dealer. If you need to return the metronome to Sabine, call for a Return Authorization number. Then send it, postage prepaid, to Sabine for replacement with a new or reconditioned product. Include your full name, address, proof of purchase and the nature of the defect. This warranty does not cover damage caused by accident, misuse or defective batteries.

Sabine, Inc.

13301 Highway 441 • Alachua, FL 32615-8544 USA

Phone: (904)418-2000 • Fax: (904)418-2001

©1997 Sabine, Inc.