 


SW70-H Quick Setup Guide

Microphone Pad Settings

Your new Sabine handheld microphone is designed to accept a wide range of input levels, from spoken word all the way up to screaming vocals. In order to accommodate this broad range of inputs, the microphone has a pad setting. Your mic is now set to -14 dB, which is the preferred setting for concert vocal performance.



If you need more output out of the microphone (the receiver LCD **AUDIO** meter shows the mic output level) then change the pad settings as described below.

When any level of attenuation is programmed, the default screen will illuminate PAD.


Transmitter PAD Adjustment

1. Use the Transmitter Select button to scroll through functions until PAD flashes in the Transmitter LCD.
2. Use the Up or Down buttons to select either 0, -6, -14 or -20. Selection is stored after 3 seconds of inactivity.
3. Check to see if the receiver's Audio Level Meter stays out of the Clipping Zone.

Suggested PAD Settings


Venue	PAD
Speech	0 dB
Loud speech & vocal performance	-6 dB
Strong vocal performance	-14 dB
Very strong vocal performance	-20 dB

 Adjust PAD setting so that Receiver Audio Level Meter stays out of the clipping zone (last segment).

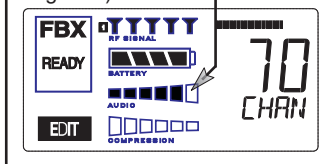

Transmitter Controls

 - ① Select Button
- ② Up Button
- ③ Down Button

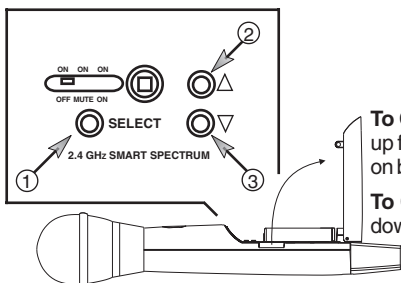

To Open: Swing door up from indented area on body.

To Close: Swing door down until it latches.

Sabine, Inc.
13301 NW US Highway 441
Alachua, Florida 32615-8544
www.Sabine.com

SABINE[®]
ADAPTIVE AUDIO

SW70-H Quick Setup Guide

Important Battery Information

Your Sabine True Mobility® SW70-H handheld transmitter comes with a C size rechargeable NiMH battery. For best results, charge the battery for at least 8 hours before using it for the first time. Please note that the full charging potential of the battery will be achieved after the first 5 charging cycles have been completed.

These rechargeable NiMH batteries are highly resistant to the “memory effect,” which affects some rechargeable batteries. The included battery will provide more lifetime charges and longer battery life for each charge than many rechargeable batteries.

Acceptable Batteries for use with Handheld & Beltpack Transmitters

SW70-H Handheld Microphones

- 1 “C” size (26x50mm, 単2電池1本使用)
- NiMH Rechargeable (Sabine part #: SWBC1)
 - Alkaline: NEDA 14A - ANSI 14A - IEC LR14
 - Heavy Duty batteries (NOT recommended)

WARNING! DO NOT USE: Alkaline Rechargeable Batteries



Alkaline “C”
Rechargeable
Batteries



Battery Caution



DO NOT BURN OR PUNCTURE BATTERY. DOING SO COULD RELEASE TOXIC MATERIALS WHICH COULD CAUSE INJURY.

DO NOT SHORT CIRCUIT

MUST BE RECYCLED OR DISPOSED OF PROPERLY.

Sabine, Inc.
13301 NW US Highway 441
Alachua, Florida 32615-8544
www.Sabine.com

SABINE®
ADAPTIVE AUDIO