


SABINE

ZIPBEAT-3000

DIGITAL METRONOME

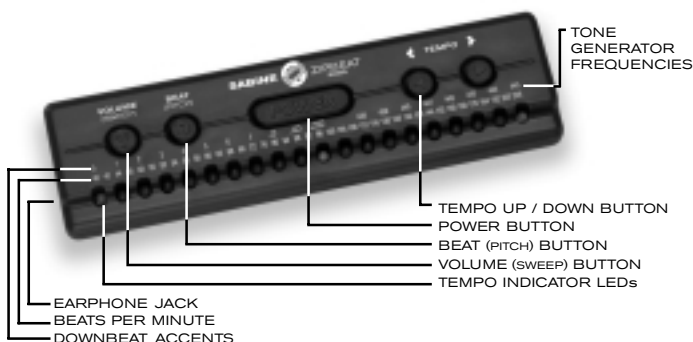

Congratulations! You've just purchased Sabine's new **ZIPBEAT-3000 Digital Metronome!** The **ZIPBEAT-3000** offers valuable features previously found only in far more expensive metronomes:

- Large, sweeping 20 LED display with realistic pendulum motion for easy viewing
- Accented downbeat with visual and auditory cues from 1 to 7 beats per measure *plus* eighth notes, triplets and sixteenth notes
- 8 setting tone generator for reference pitch - from A=438 Hz to 445 Hz
- Adjustable 40 to 208 beats per minute (Largo to Presto)
- 3 stage volume control
- Power-off memory of previous settings
- Free earphones & batteries included
- Two-year warranty

OPERATING INSTRUCTIONS

1. To turn the ZIPBEAT-3000 on and off, press the POWER button. Adjust the speed of the ZIPBEAT-3000 by pressing the TEMPO UP or TEMPO DOWN buttons. The ZIPBEAT-3000 is adjustable from 40 to 208 beats per minute. The LED display will light under the "beats per minute" scale to indicate tempo. When two LEDs light simultaneously, the speed is indicated by the number printed between the two LEDs.

2. To adjust the 3 position volume of the ZIPBEAT-3000, press the VOLUME (SWEEP) button. Press it to choose a loud, medium or mute volume level of the metronome clicks.

3. You can create an accented downbeat to indicate the beginning of a measure by pressing the BEAT (PITCH) button. Select no accent or from 1 to 7 beats per measure. The LED display will light a green LED as a visual cue and the metronome will chirp simultaneously.

4. The ZIPBEAT-3000 also allows you to select

clicks per beat. You can divide a beat into 2 clicks (eighth notes), 3 clicks (triplets) or 4 clicks (sixteenth notes). Continue pressing the BEAT (PITCH) button - with the corresponding LEDs passing through numbers 1 through 7. The next 3 positions shown are indicated by musical notes on the ZIPBEAT-3000. These 3 positions represent the 'clicks per beat' selection.

5. You can alternately select a full sweep of the LED display or just two LEDs lighting in unison to indicate each beat by pressing and holding the VOLUME (SWEEP) button & holding for 1 second.

6. You can check your tuning (standard A=440 Hz tuning) by using the built-in tone generator. Press and hold for about one second the BEAT (PITCH) button. When you release the button, you will hear the tone. The frequency is indicated by the top row of numbers - ranging from 438 Hz to 445 Hz.

BATTERY REPLACEMENT

1. Using finger or screwdriver, push down the tab on the battery cover to remove.
2. Before replacing the batteries, note the polarity indicated on the back of the ZIPBEAT-3000 and insert 3 AAA batteries accordingly.

CAUTION:

Do not use force to remove battery cover. Avoid excessive moisture.

SPECIFICATIONS

Tempo Range:	From 40 to 208 beats per minute (39 step)
Beats:	0,1,2,3,4,5,6,7 and $\frac{1}{2}$, $\frac{3}{4}$, $\frac{1}{4}$
Standard Pitch:	438-445 Hz (+/- 0.5 Cent Accuracy)
Battery:	3 AAA batteries (1.5V cell, 4.5V total)
Memory:	Tempo, Pitch, Beat, Volume and Sweep mode settings
Dimensions:	143 x 40 x 15 (W x D x H)
Earphone jack:	1/8th inch (3.5mm)

WARRANTY

If your ZIPBEAT-3000 fails because of manufacturing defect within TWO YEARS from the date of original purchase, please return, postage paid, to SABINE for a replacement with a new or reconditioned product. This warranty does not cover the damage caused by accident, misuse or defective batteries. You must include your name, address, proof of purchase and the nature of the defect.

Sabine, Inc. • 13301 Hwy 441 • Alachua, Florida • 32615 • USA
(904)418-2000 • (904)418-2001 fax • www.SabineUSA.com